

ROUIN

RVNet-KV

KV PLC

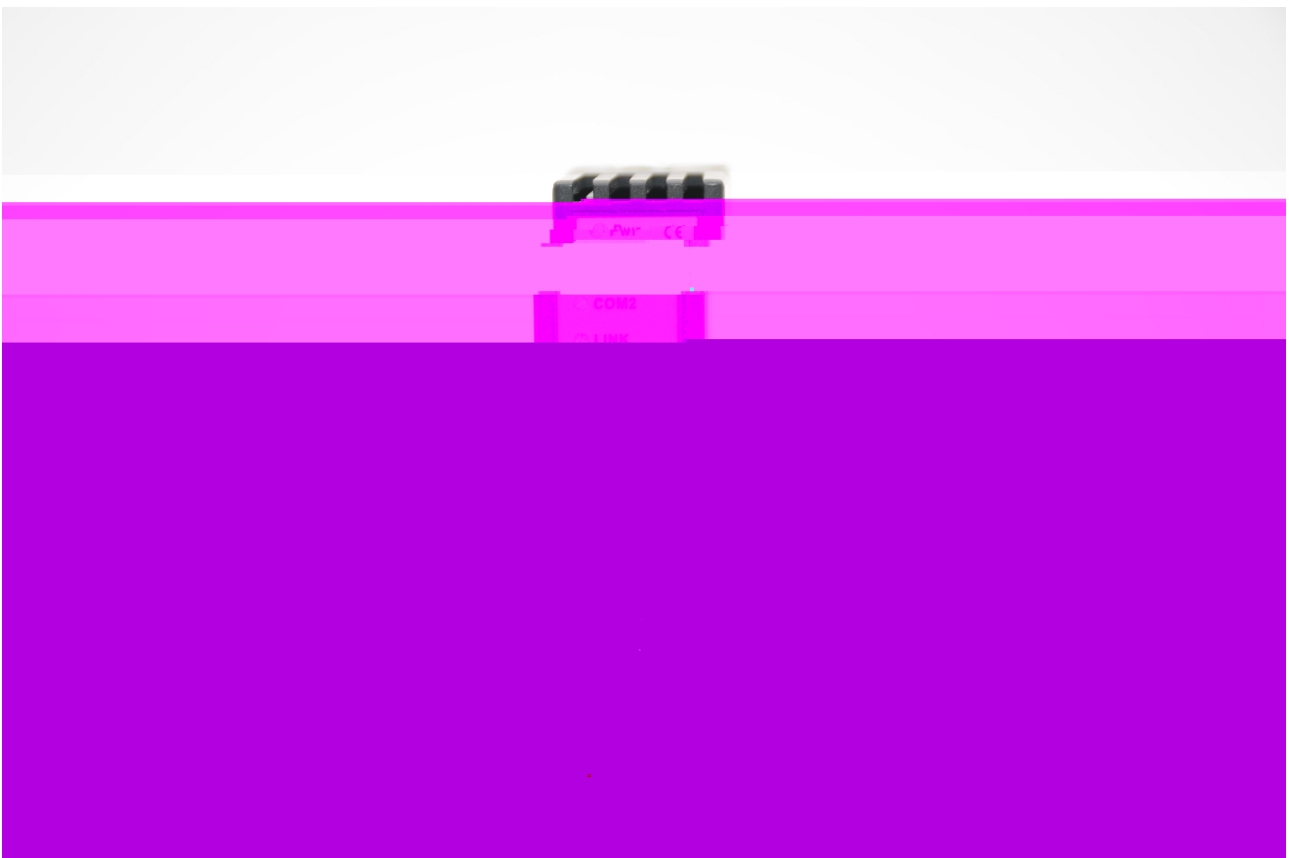

RVNet - KV

RVNet - KV

KV PLC
PLC
X2 PLC

/

PLC

1


35mm
RVNet - KV

COM
KV

KV RS232

24VDC

COM2

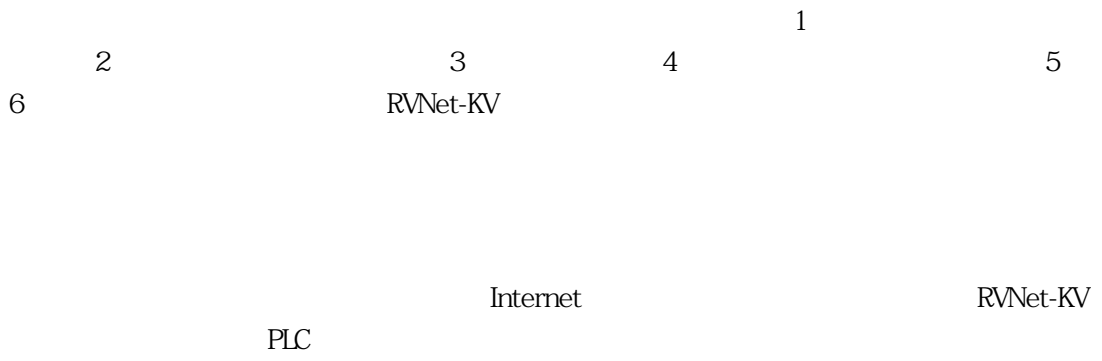

RVNet-KV产品的硬件和接口图



X1 RJ11 PLC

1	—————	5V
2	—————	5V
3	—————	TXD
4		SG-0V
5		RXD
6		SG-0V
X1		9.6k 19.2k 38.4K 57.6K 115.2k

X2 RJ11

1		5V
2		5V
3		RXD
4		SG-0V
5		TXD
6		SG-0V
X2		9.6k 19.2k 38.4K 57.6K 115.2k

RJ45

1	—————	TX+		
2	—————	TX-		
3	—————	RX+		
6	—————	RX-		
	Link	Active	10/100M	T568A/
T568B				

X4 RVNet-KV 24VDC 24VDC±20%/100mA
24VDC

RVNet-KV
COM2

LED
LINK

Pwr

COM1

	Pwr	COM1	COM2	LINK

RVNet-KV

PLC

LINK

PLC

COM2

COM1

COM1

COM2

Pwr

COM1

COM2

Link


RVNet-KV

RVNet-KV RJ45

RVNet-KV

Link

IP 192.168.1.100

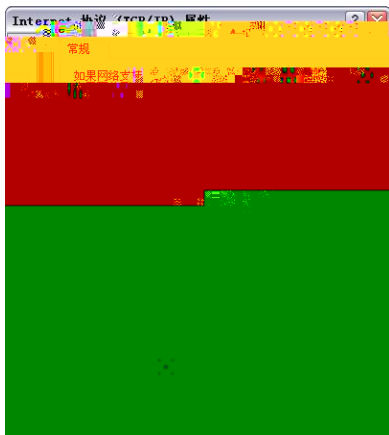

Internet Explorer



192.168.1.178

RVNet-KV

IP

RVNet-KV



Web

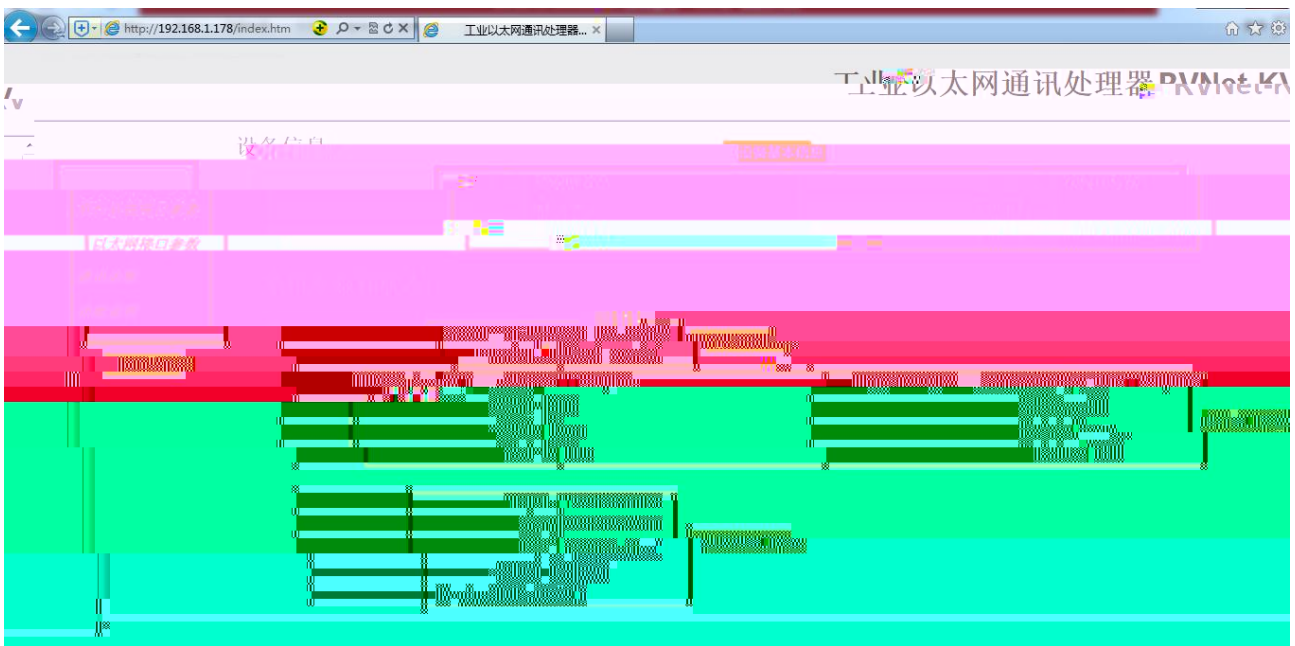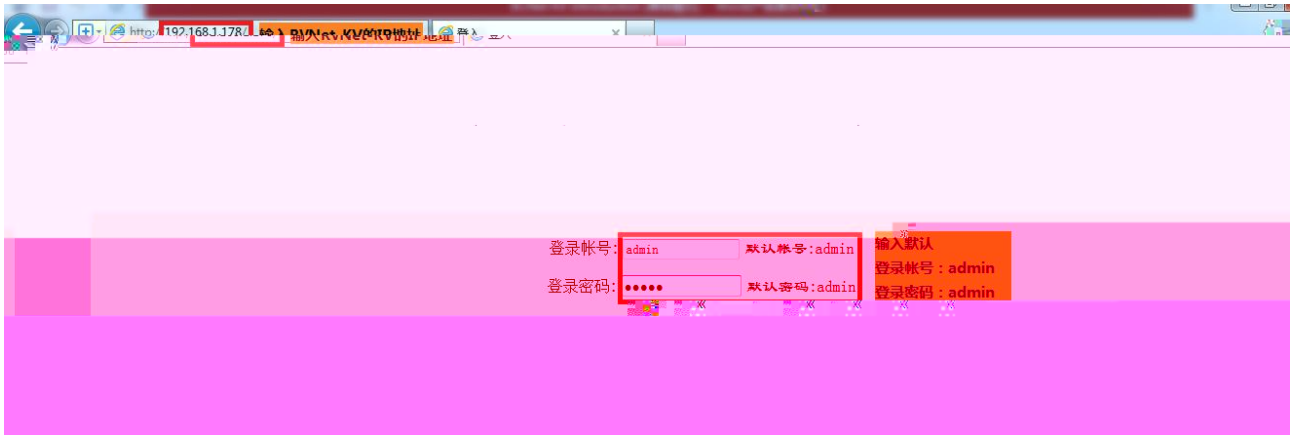

PLC

PLC

COM1 COM2

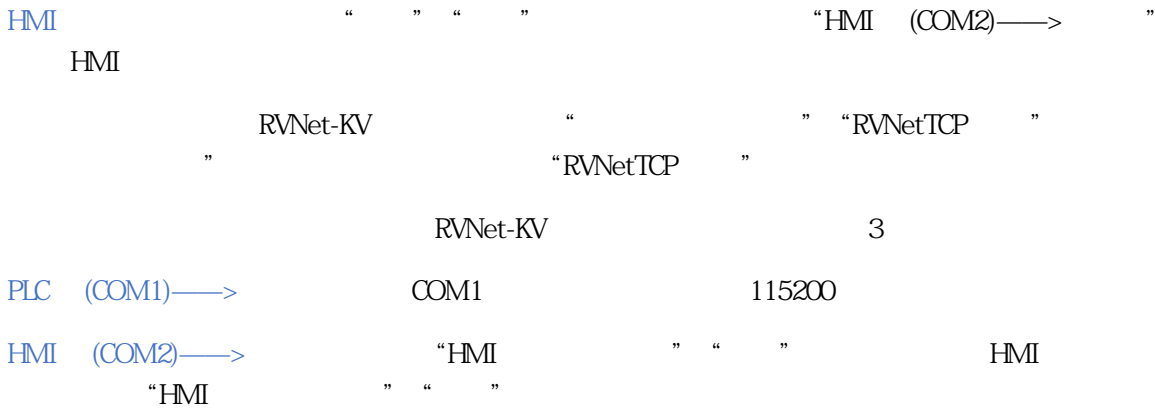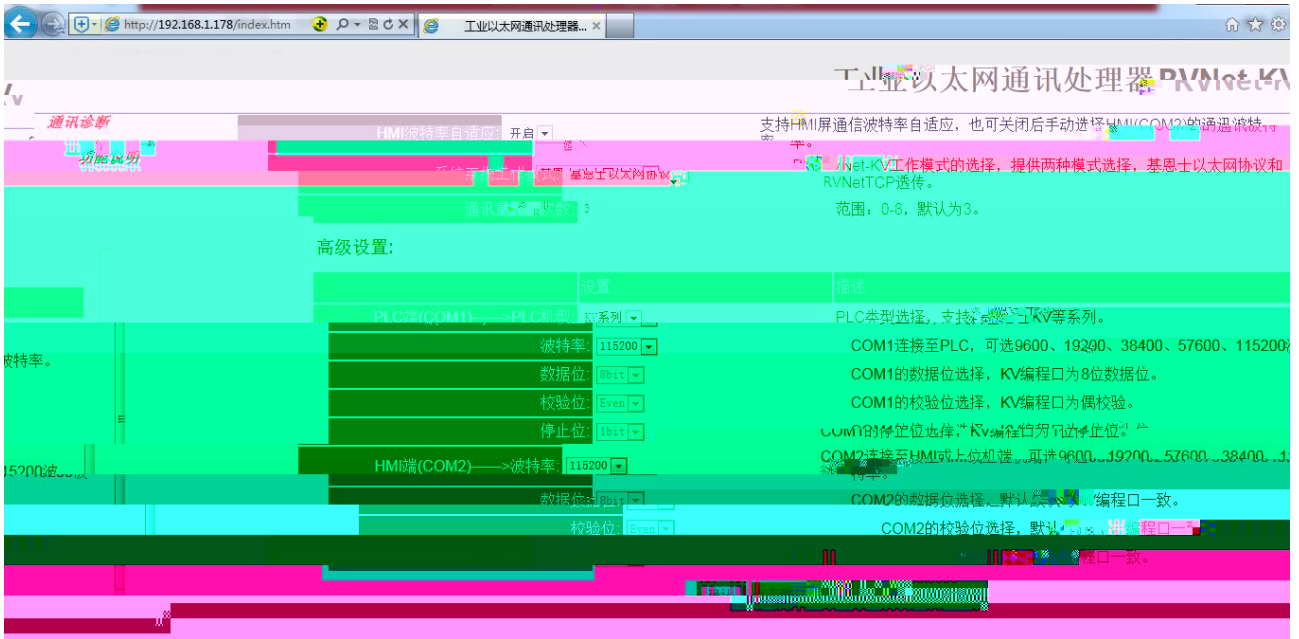



RVNet-KV IP

[]

RVNet-KV

IP

8501

“RVNetTCP”

“ ”

ModbusTCP

1

ModbusTCP

[]

RVNet-KV

工业以太网通讯处理器RVNet-KV



COM1—

PLC

PLC
PLC

COM2—

TCP/IP—

TCP

S7TCP
RVNet-KV
RVNet-KV

TCP/IP

RVNet - KV
ModbusTCP

SCADA

RVNet - KV
OPC
PLC

PLC

ModbusTCP
ModbusTCP

ModbusTCP

ModbusTCP

KV

Modbus
RVNet
FC1 FC3 FC5 FC6 FC16

KV
PLC

ModbusTCP

0x0	0x0	0x0	0x0	0x0								


1

Modbus	KV	PLC				
000001		R00000		Rm = 000001+(m/100)*16+m%100		
016385	M000000			Mm = 016385+(m/100)*16+m%100	FC1()	FC1: 512
032769	L000000			Lm = 032769+(m/100)*16+m%100	FC5()	FC5: 1
049153	C000000			Cm = 049153+(m/100)*16+m%100		
400001	D00			Dm = 400001+m	FC3() FC16() FC6()	FC3: 125 FC16: 125 FC6: 1

$$R00015 \quad \frac{m}{100} \quad \frac{100}{PLC} \quad \frac{m}{100} \quad \frac{100}{16} ;$$

2 ModScan32


1. \ \ modscan2_cr.rar
2. ModScan32
 Connection/Connect Remote TCP/IP Server RVNet - KV IP Service
 502 [OK] 1

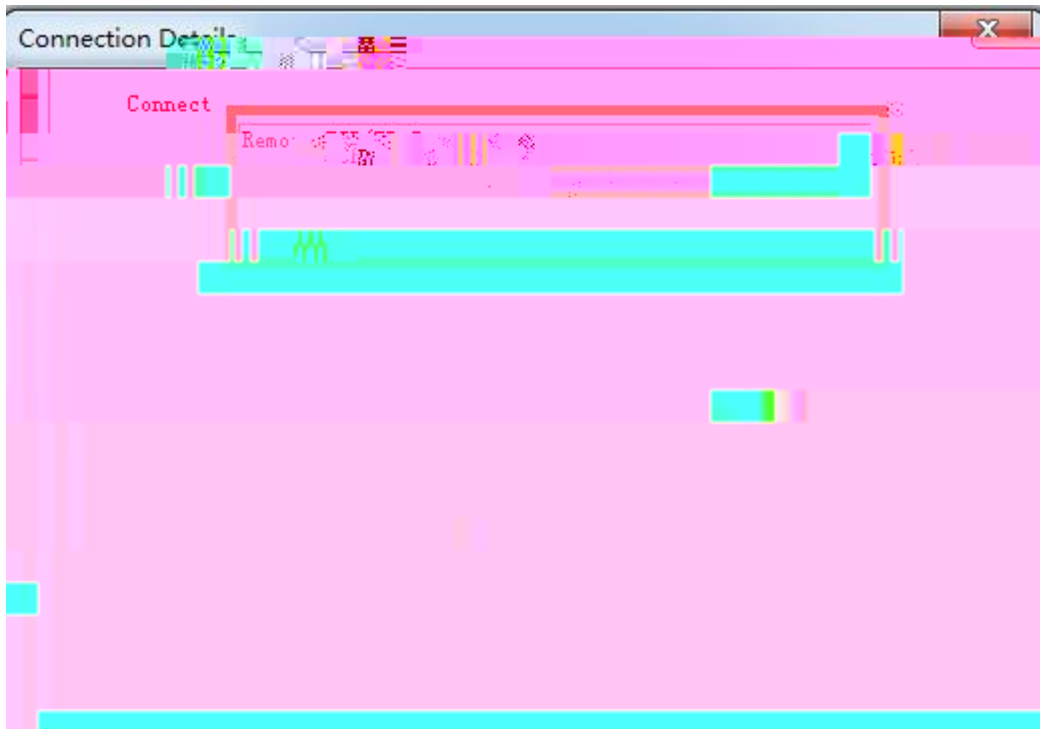

1

3. "ModSca1" Device ID PLC 1 03: HOLDING REGISTER
Address = 0001 Length = 100



4. 400001 400100 16 KV PLC DM0 DM00
2

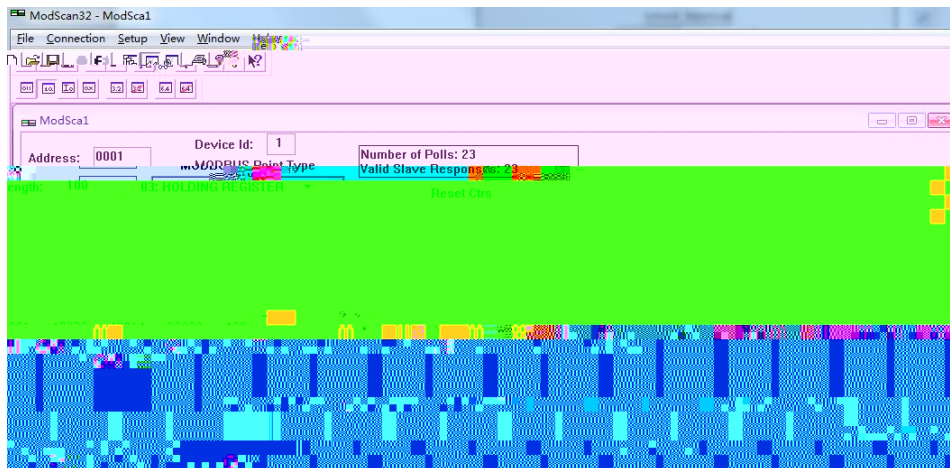

2

5.


1. KV STUDIO Ver. 9G_Trial " / " " "

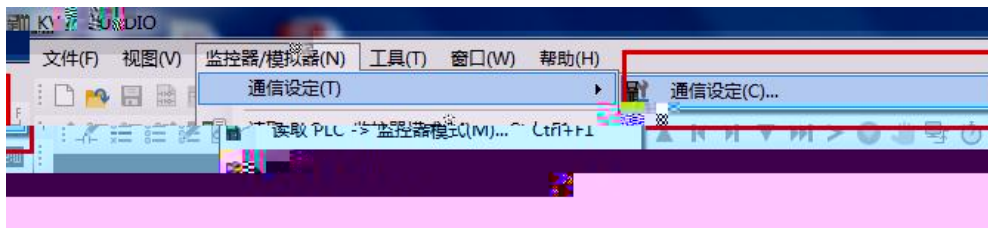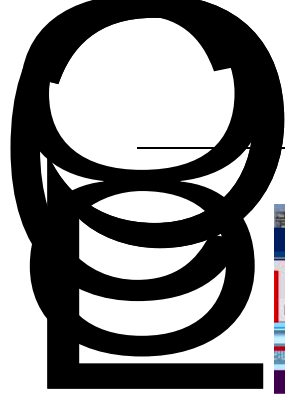

2.

RVNet-KV IP

8500

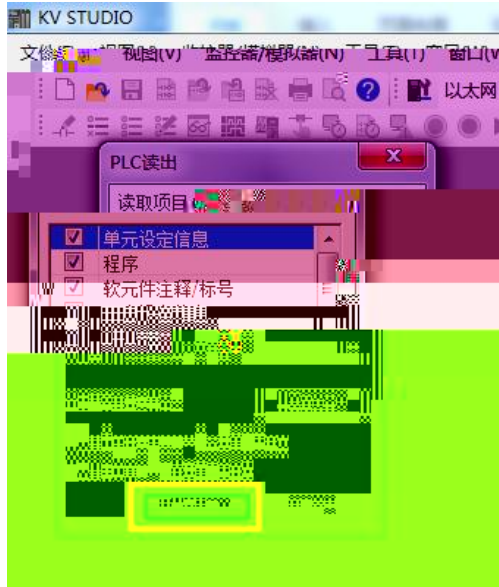

5.




6.



1.

2. " COM" " " " ModbusTCP—TCP" " "

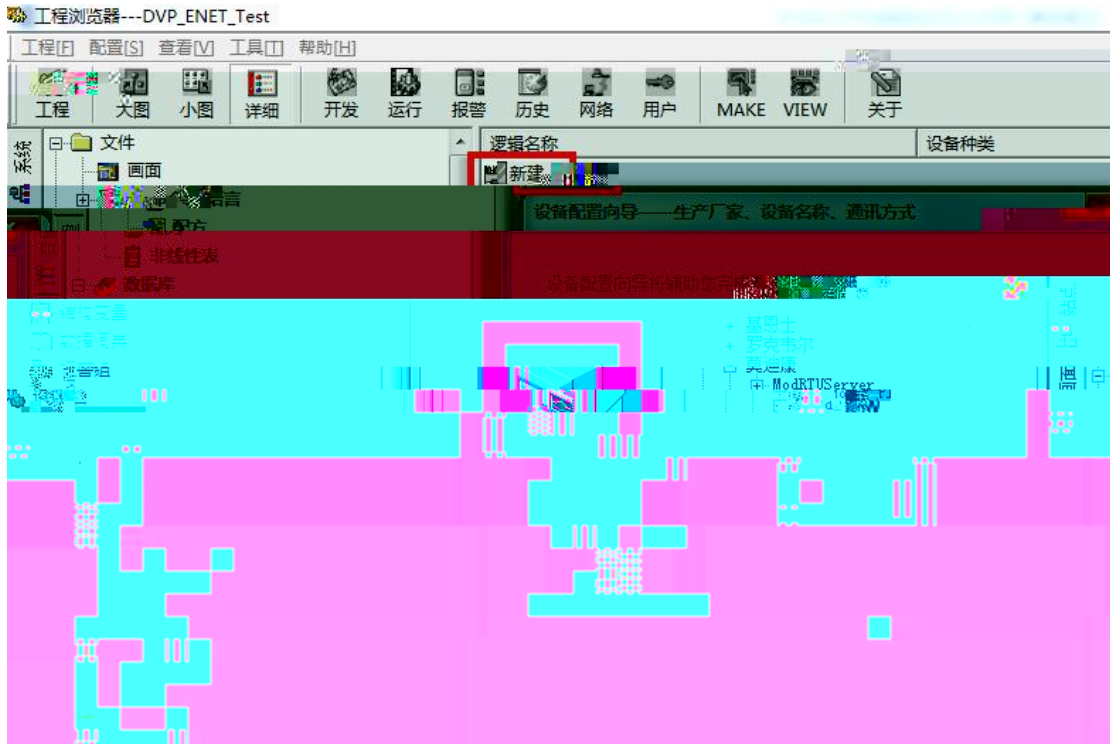


3.



4. RVNet - KV e


1. " IO " PLC " MODI CON -MODBUS TCP "

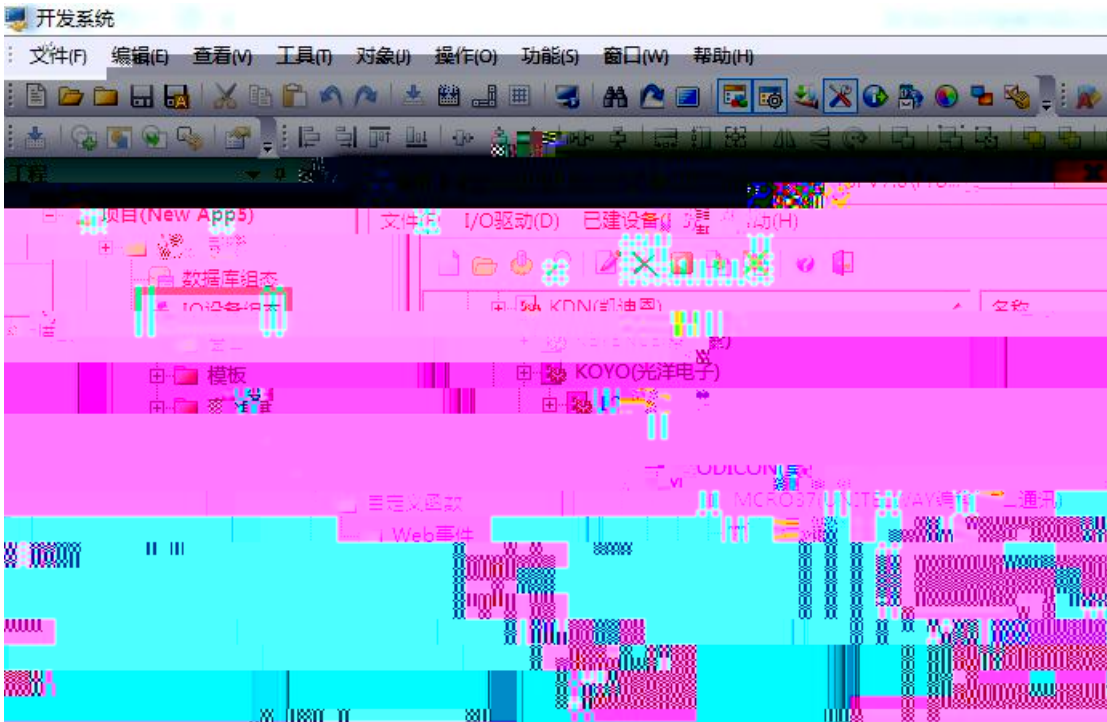


2. " " DVP " " 1 " "




3. " IP " RVNet-KV IP 192.168.1.178 " 502

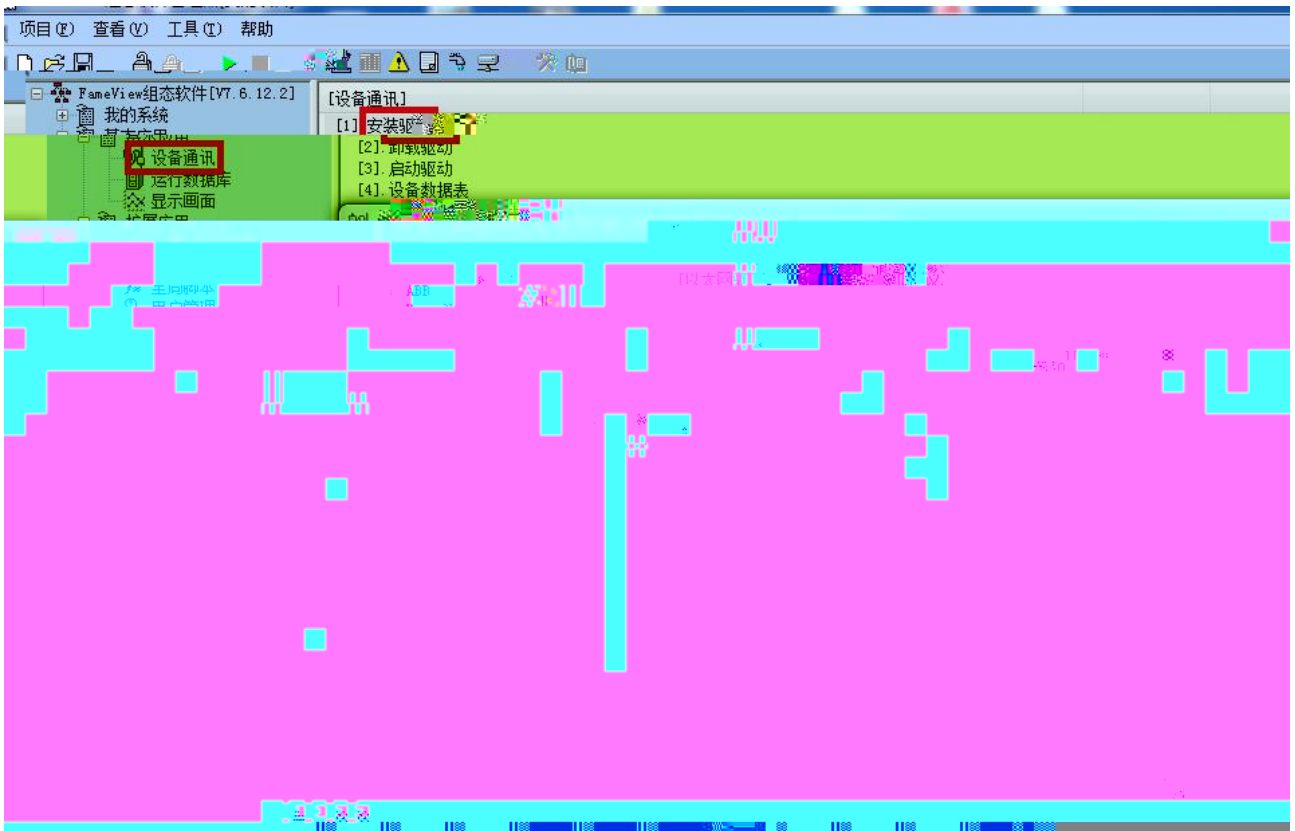

2 " " " " XJ " " 502 " IP
 " RVNet-KV IP 192.168.1.178 " "

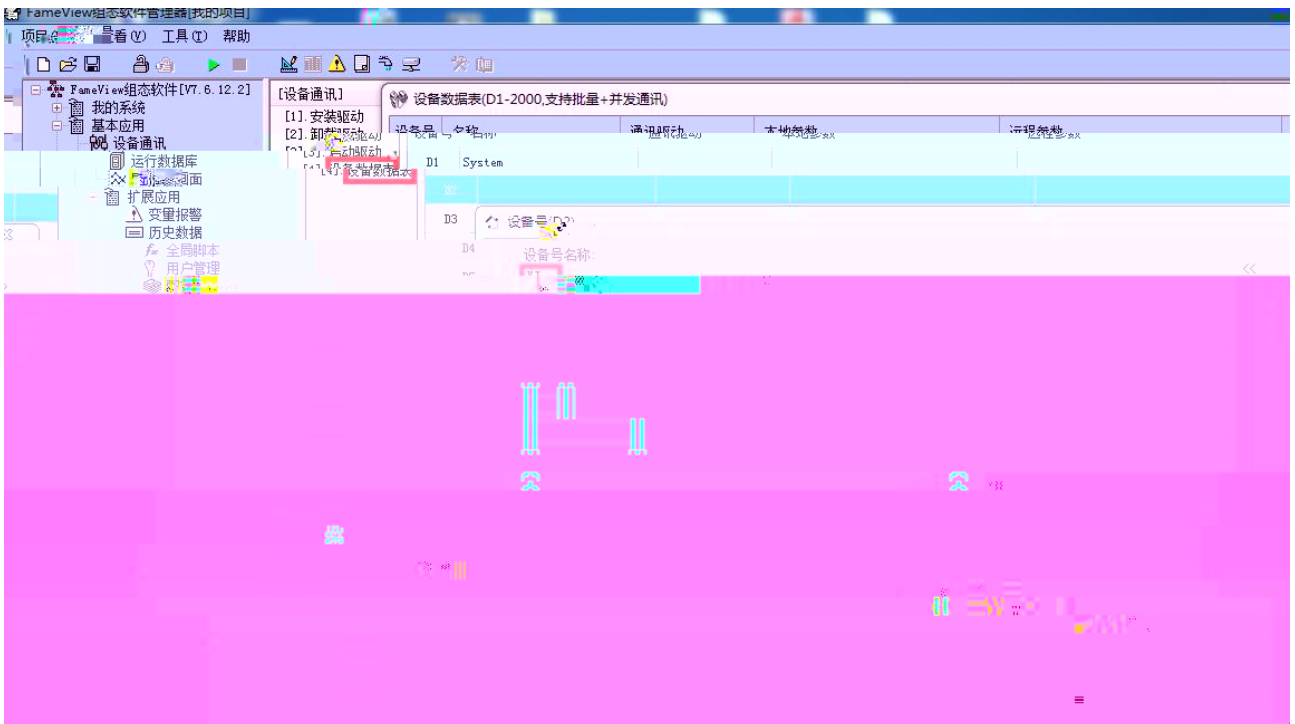


1. KEPServer EX " Click to add a channel "

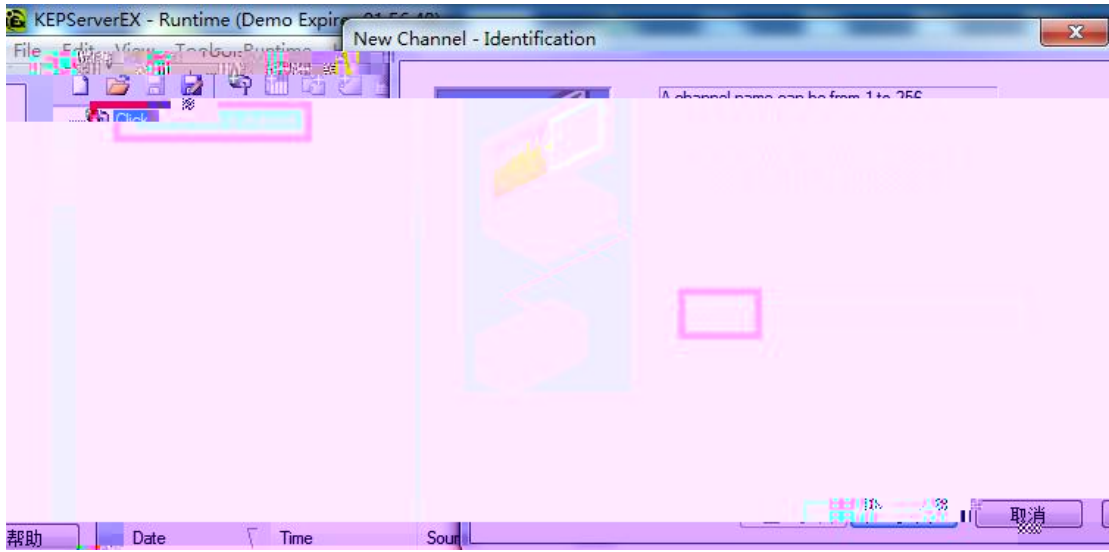


2. " Modbus TCP/IP Ethernet"




3. " Default"

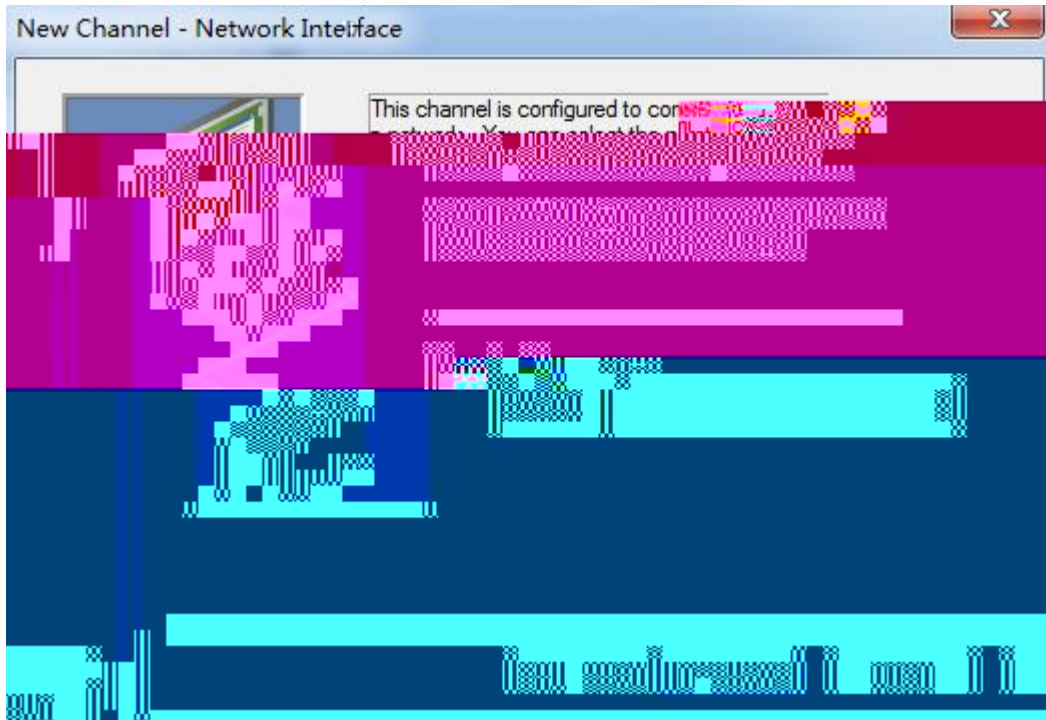


4. " click to add a device" , " " "

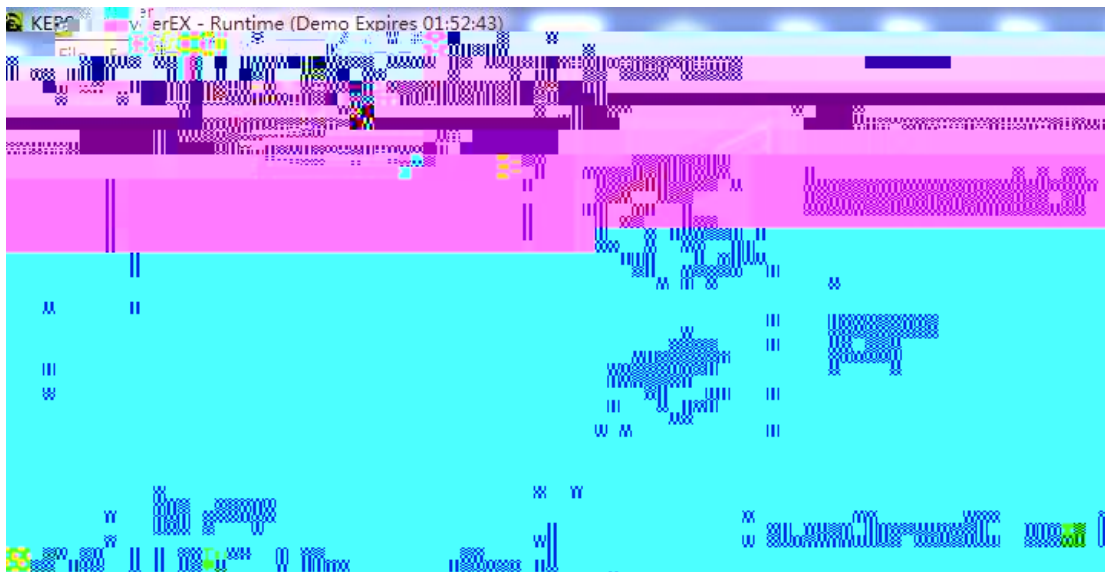


5. " Devi ce Model " " Model " "

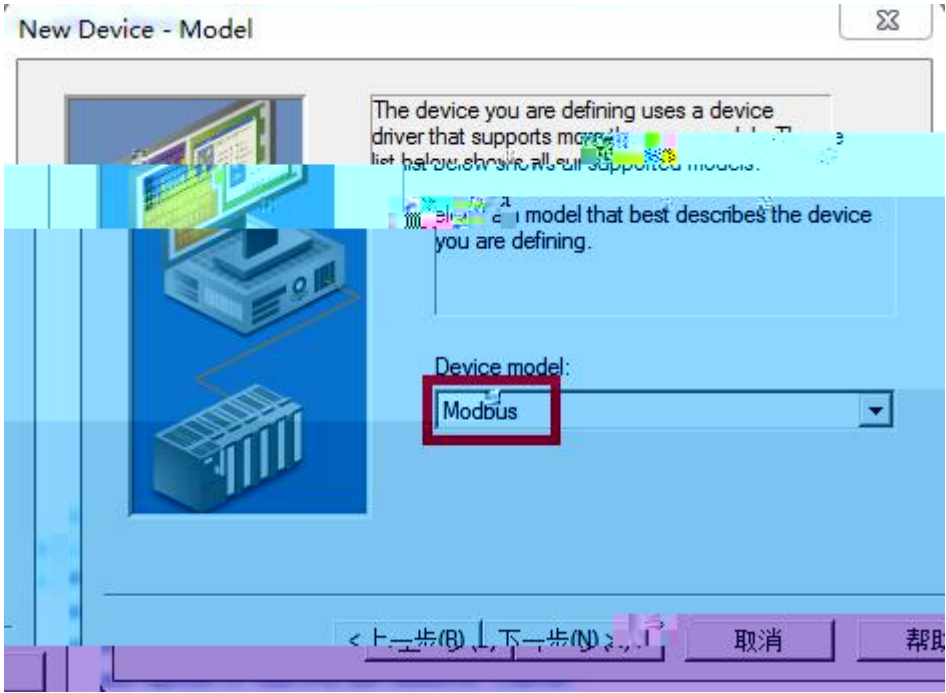


6. " Device ID" IP .0 192.168.1.178.0

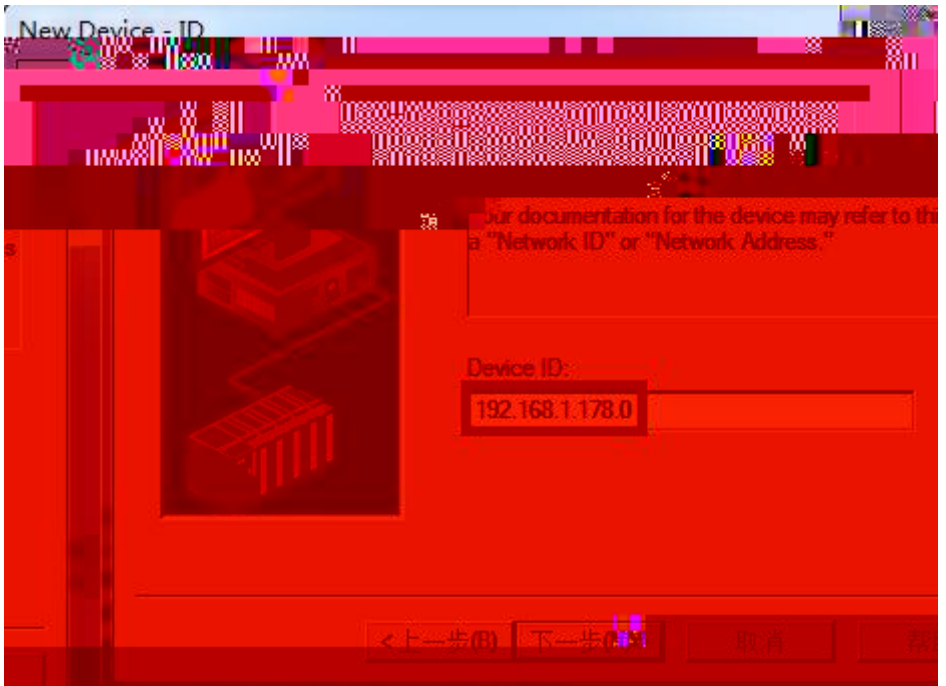

7.

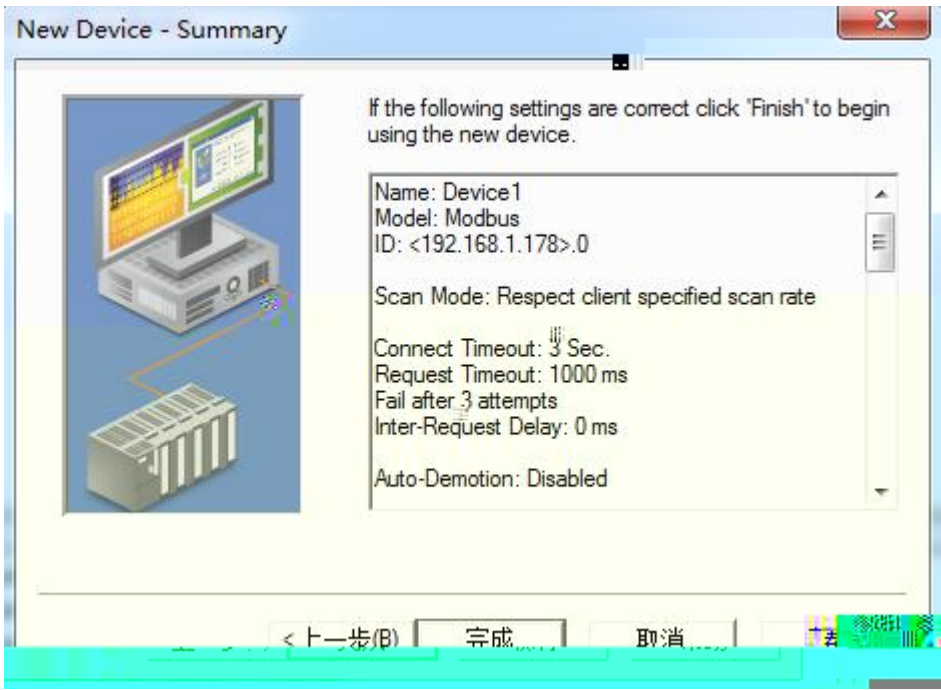


1. Wincc
 “Modbus TCPIP.chn”

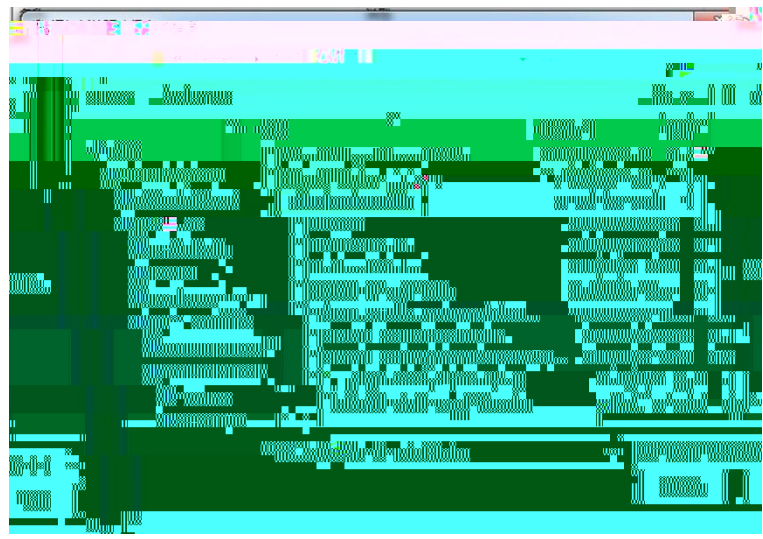

2. “Modbus TCPIP/IP #1” “ ” “ ”
 “ CPU ” “ 984” “ ” RVNet-KV IP “ ” 502 ”
 “ PLC ” 1



3. “ ” DO “ ”
 “ ” “4x” “4x” “400001”, plc DO

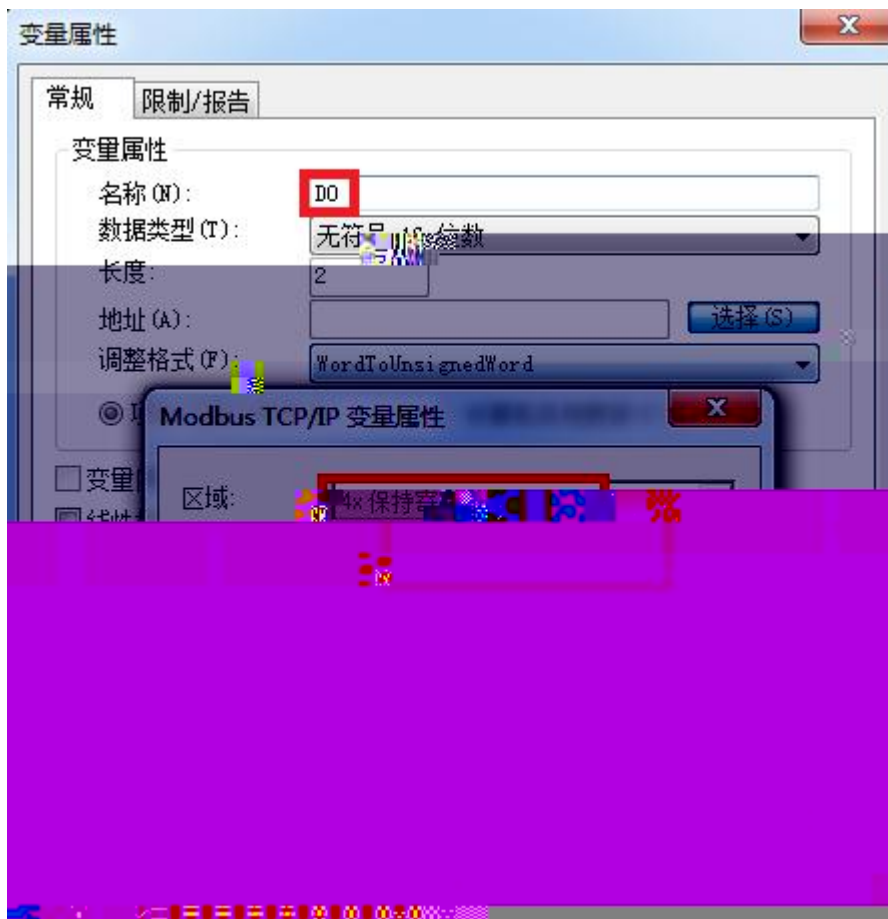

2755

250101

0531-88689022

0531-88689022

111

266107

0532-68894021 83029299

0532-83029299

18753243991 garywei@dingtalk.com

www.roviniot.com

